



Notes:

- Place the IC so that its Pin 1 fits in Pin 1 of the ZIF socket.
- The bottom 3 sets of pins are NOT used, Do not plug anything into them.
- Power Supply can be from 6vdc to 15vdc.
- Battery Negative should NOT be connected to circuit negative.
- R3 & R8 change the rate of the LEDs flashing.

NightFire Electronics, LLC		
	Dual Op Amp Tester	REV A
Sheet 1 of 1		A. Acosta
Oct 2017		www.vakits.com