



Parts in GRAY area are not used when Relay is used.

NOTES:

1. GP3 is input-only.
2. VR1 is for ON time and VR2 is for OFF time.
3. R7, R8, & Q3 are for Power Switch only.
4. SW 1 & 2 are available for programming.

NightFire Electronics LLC		
	Programmable Relay Switch	Rev A
Sheet 1 of 1		A. Acosta
April 2016		www.vakits.com