



Notes:

1. Trigger input should be a switch to Ground.
2. Change VR1 or C2 to shorten or lengthen the time.

NightFire Electronics		
#1745	Timer with Relay #2 www.vakits.com	Rev C